


A RADICAL SOFTWARE STATE-OF-THE-ART REPORT

**Tivicon:
MODIFICATION
FOR AVC-3400
VIDEO
CAMERA**




Do-It
Yourself
HIGH
TECHNOLOGY

1. Remove "P" Circuit Board behind case as shown on fig. 2-1 (fig. numbers correspond to SONY Service Manual for AVC-3400 camera).
2. Cut foil as indicated fig. 4-2 and schematic fig. 4-5. Connect free end of capacitor C201 0.1MF to + 9 Volt as shown.
3. Re-install "P" Circuit Board behind case.
4. Vidicon position adjustment: move screws to the rear as indicated on fig. 6-5.

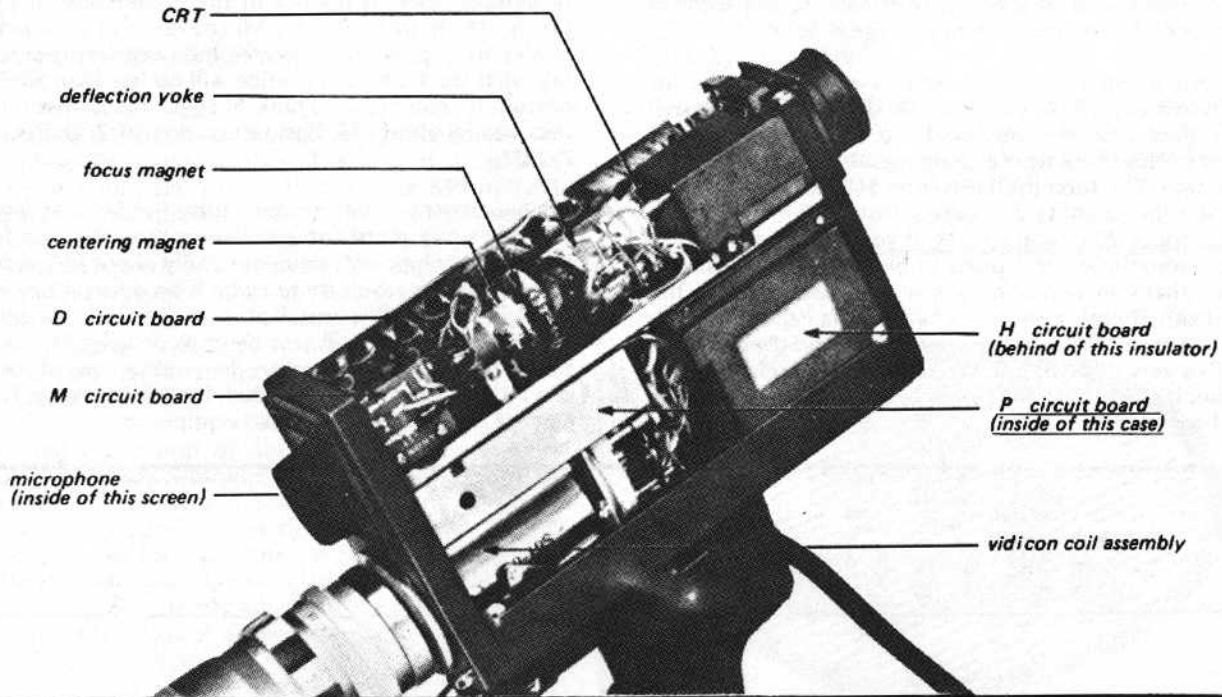

2-1

"P" VIDEO PRINTED CIRCUIT BOARD - CONDUCTOR SIDE

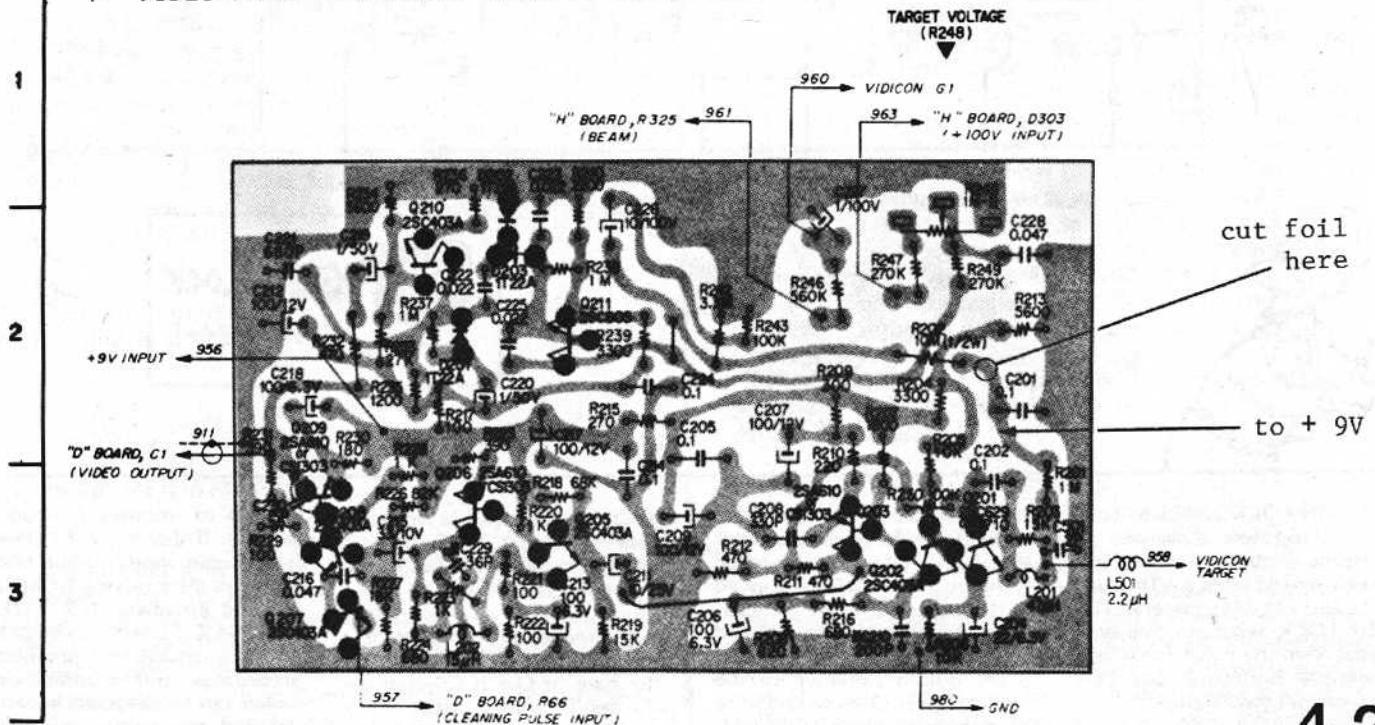

4-2